



50263

Natural Home III


①

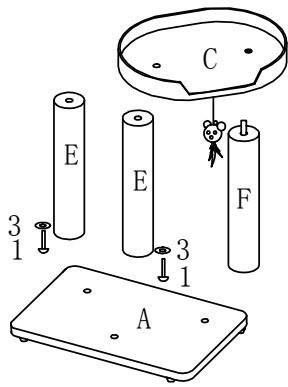


②

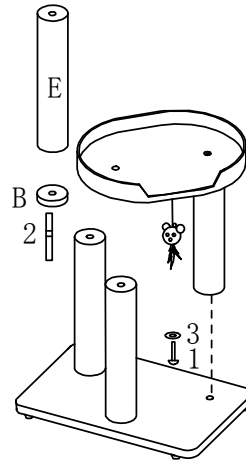



③

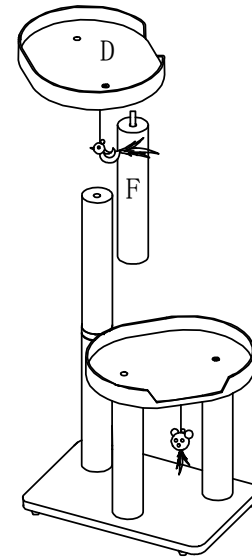

1X  60*40*2.5cm A


1X  D9*1.5cm B

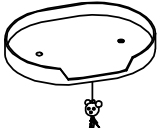
1X  50*40*6cm C

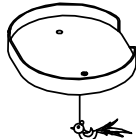
1X  50*40*6cm D


3X  D9*45cm E

2X  D9*45cm F


3X  D10*60mm (1)

1X  D10*90mm (2)


3X  D40mm (3)




④

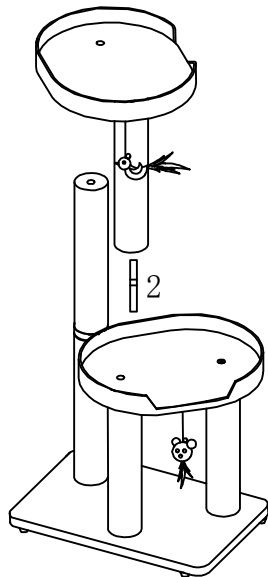


⑤

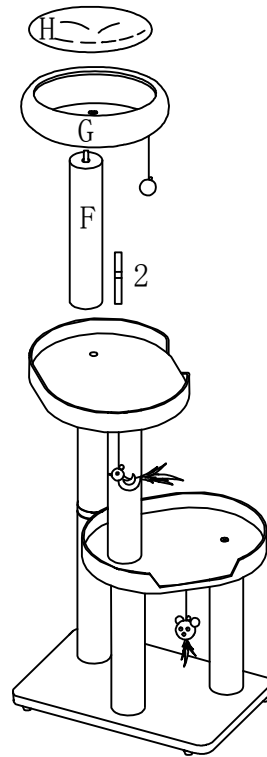

⑥

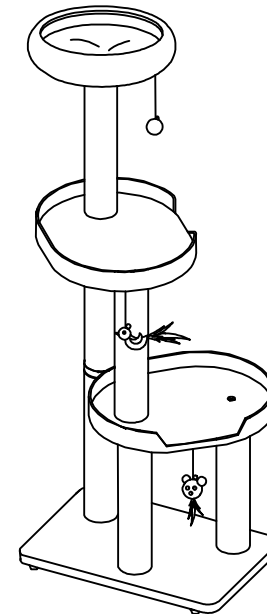

1X



D9*45cm

F

1X



D40*12cm

G

1X



D40cm


H

2X



D10*90mm

(2)

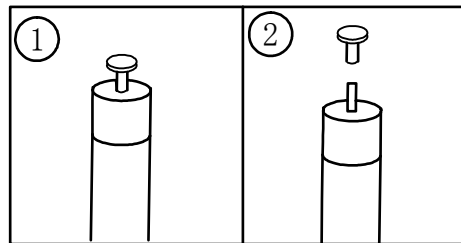

Remove the black cap on screw of post before build up the tree